


# UNIFORM WARES

C36

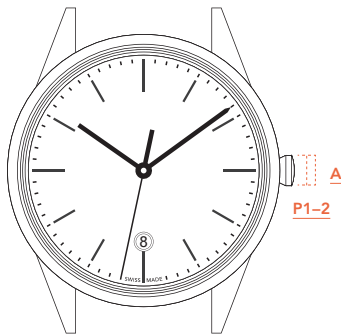

## User instructions

### Setting the time

1. Adjust the watch crown (A), situated on the side of the case at the 3 o'clock position, out from the Operating Position (P1) to Set Position 2 (P2) by pulling outwards. When the crown is fully extended to Set Position 2 (P2), the second hand will stop clicking.
2. Turn the crown anti-clockwise to the desired time. DO NOT turn the crown clockwise.
3. When the time is set, push the crown back to the Operating Position (P1); the second hand will resume.

*Please note: Whilst the crown is in the Set Position the watch is not moisture resistant.*

### Setting the date and day

1. Adjust the watch crown out from the Operating Position to set Position 1 (P1) where the crown (A) is half extended at the first adjustment click.
2. Turn the crown clockwise to set the date and anti-clockwise to display the desired day.

*Please note: Your watch has a dual language day display but will only function according to the language you have set.*

3. When the date and day are set, push the crown back to the Operating Position (P1).

*Please note: The date and day should be set before 12 noon so that the calendar indicator changes in sync at twelve midnight and not 12 noon.*

*Please note: Whilst the crown is in the Set Position 1 (P1) or 2 (P2), the watch is not moisture resistant.*

## Watch care

Your Uniform Wares timepiece requires a certain amount of care. The following guidelines will enable you to ensure its reliability and protect its appearance over time.

## Cleaning

Please use a clean, lint free cloth with warm water and, if required, a mild detergent diluted in water to remove any dirt from the case. To clean the lens, use a clean chamois cloth. Avoid submerging the watch case in water.

## Battery

Your watch's power source is a Swiss-made Renata cell which has an estimated lifespan of 60 months. When your battery requires replacing, please refer to the Uniform Wares website [www.uniformwares.com/service](http://www.uniformwares.com/service) for information on battery replacement.

## Water Resistance

This watch is designed to withstand everyday use and has a 5ATM water resistance rating. Exposure to high humidity and light rain showers is acceptable. However, you should avoid wearing the watch whilst showering, swimming, diving or during any other activity where it may be subjected to abnormal water pressures or environments where abnormal heat and moisture are present (ie 'saunas' or 'hot tubs'). This combination may have a negative effect on the seals and gaskets of the watch.

## Condensation

If your timepiece experiences a sudden change in temperature or pressure, a slight condensation may appear under the sapphire glass. This mist should disappear by itself and will not affect the functioning of your watch. If the condensation persists, please contact [www.uniformwares.com/service](http://www.uniformwares.com/service).