


# UNIFORM WARES

M40

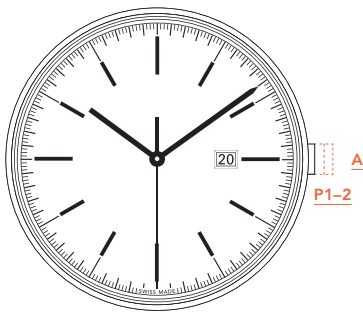

## User instructions

### Setting the time

1. Adjust the watch crown (A), situated on the side of the case at the 3 o'clock mark, out from the Operating Position to Set Position 2 (P2), where the crown is fully extended at the second adjustment click. You will notice the second hand stops ticking.
2. Turn the crown clockwise to the desired time. DO NOT turn the crown anti-clockwise.
3. When the time is set, push the crown back to the Operating Position and the second hand will resume.

### Setting the date

1. Adjust the watch crown out from the Operating Position to Set Position 1 (P1), where the crown is half extended at the first adjustment click.
2. In Set Position 1 (P1) the watch will continue ticking during adjustment. Turn the crown clockwise until the correct date is displayed.
3. When the date is set, push the crown back to the Operating Position.

*Please note: The date should be set before 12 noon so that the calendar indicator changes in sync at twelve midnight and not twelve noon.*

*Please note: Whilst the crown is in either Set Position 1 or 2 the watch is not moisture resistant.*

## Watch care

Your Uniform Wares watch requires a certain amount of care. The following guidelines will enable you to ensure its reliability and protect its appearance over time.

## Cleaning

Please use a clean, lint-free cloth with warm water or, if required, a mild detergent diluted in water to remove any dirt from the case. To clean the lens use a clean chamois cloth. Avoid submerging the watch case in water.

## Battery

Your watch's power source is a Swiss-made Renata cell which has an estimated lifespan of 60 months. When your battery requires replacing, please refer to the Uniform Wares website [www.uniformwares.com/service](http://www.uniformwares.com/service) for information on battery replacement.

## Water resistance

This watch is designed to withstand everyday use and has a 5ATM water resistance rating. Exposure to high humidity and light rain showers is acceptable. However, you should avoid wearing the watch whilst showering, swimming, diving or during any other activity where it may be subjected to abnormal water pressures or environments where abnormal heat and moisture are present (e.g. saunas or hot tubs). This combination may have a negative effect on the seals and gaskets of the watch.

## Condensation

If your watch experiences a sudden change in temperature or pressure, a slight condensation may appear under the sapphire glass. This mist should disappear by itself and will not affect the functioning of your watch. If the condensation persists, please contact [www.uniformwares.com/service](http://www.uniformwares.com/service).

## **Guarantee**

---

This Uniform Wares watch is guaranteed against defects in materials and workmanship under normal use for a period of two years from the date of retail purchase by the original end-user purchaser. If a hardware defect arises within the warranty period, please refer to the Uniform Wares website [www.uniformwares.com/](http://www.uniformwares.com/) service for information on the repair procedure for your particular watch.

## **Items not covered under guarantee**

---

- Watch case, lens or back plate tarnished through general wear and ageing of the product
- Battery
- Straps and bracelets
- Damage caused by accident, misuse or lack of care
- Defect of internal or external components due to contact with water or moisture

*Please note: This guarantee shall be deemed void if the case of the watch has been opened for inspection or service, dismantled or repaired by anyone but an authorised Uniform Wares service department.*