

UNIFORM WARES

C33



User instructions

Setting the time

1. Adjust the watch crown (A), situated on the side of the case at the 3 o'clock mark, out from the Operating Position to the Set Position by pulling outwards; you will hear a click.
2. Turn the watch crown clockwise to the desired time. DO NOT turn the crown anti-clockwise.
3. When the time is set, push the crown back to the Operating Position.

Please note: Whilst the crown is in the Set Position, the watch is not moisture resistant.

Watch care

Your Uniform Wares watch requires a certain amount of care. The following guidelines will enable you to ensure its reliability and protect its appearance over time.

Cleaning

Please use a clean, lint-free cloth with warm water or, if required, a mild detergent diluted in water to remove any dirt from the case. To clean the lens use a clean chamois cloth. Avoid submerging the watch case in water.

Battery

Your watch's power source is a Swiss-made Renata cell which has an estimated lifespan of 60 months. When your battery requires replacing, please refer to the Uniform Wares website www.uniformwares.com/service for information on battery replacement.

Water resistance

This watch is designed to withstand everyday use and has a 5ATM water resistance rating. Exposure to high humidity and light rain showers is acceptable. However, you should avoid wearing the watch whilst showering, swimming, diving or during any other activity where it may be subjected to abnormal water pressures or environments where abnormal heat and moisture are present (e.g. saunas or hot tubs). This combination may have a negative effect on the seals and gaskets of the watch.

Condensation

If your watch experiences a sudden change in temperature or pressure, a slight condensation may appear under the sapphire glass. This mist should disappear by itself and will not affect the functioning of your watch. If the condensation persists, please contact www.uniformwares.com/service.